

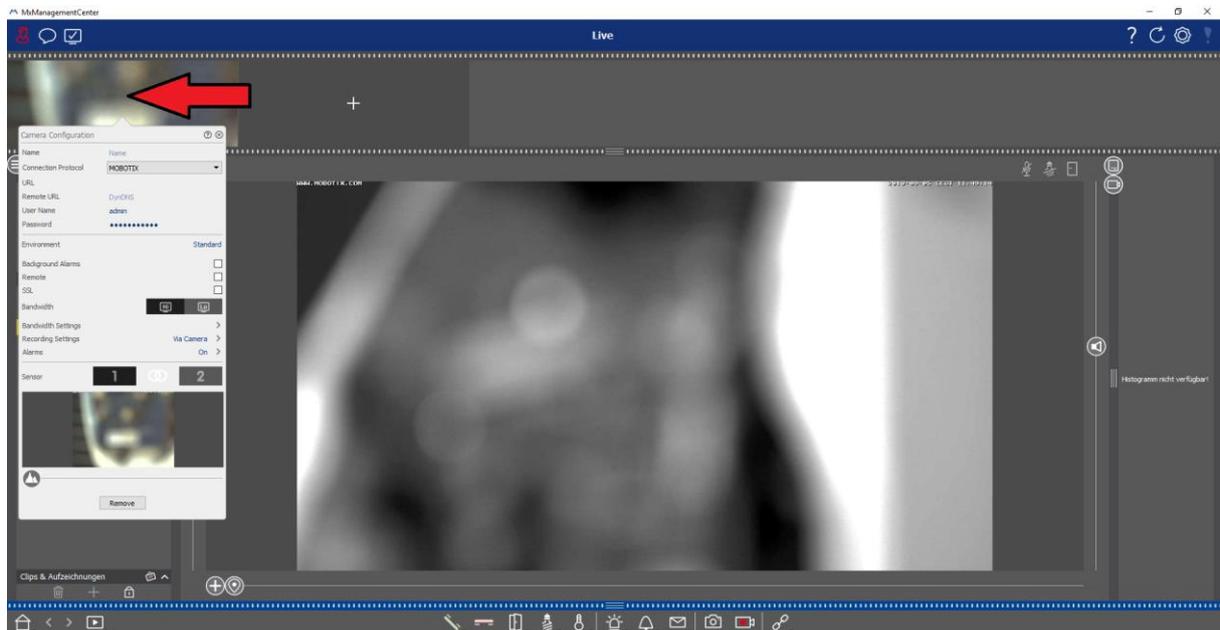


# Pan-Tilt-Unit PT5 MxMC Configuration

## 1. Right-click into your camera preview window

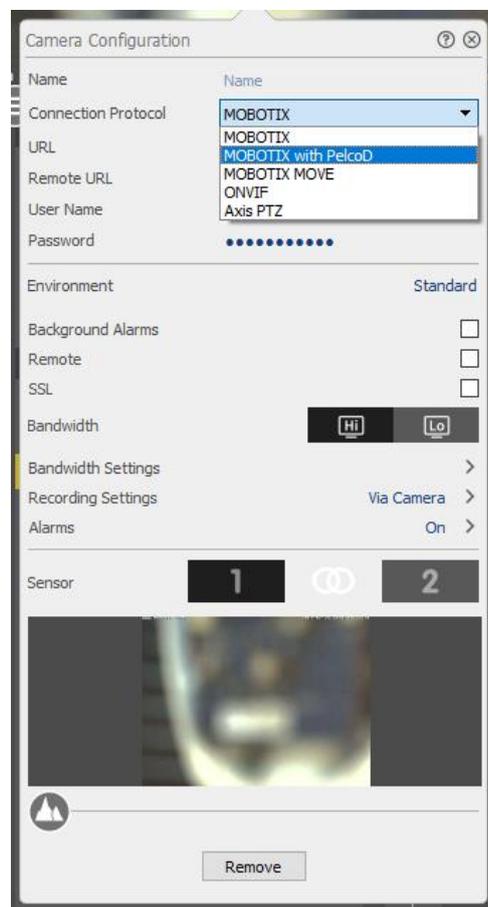


## 2. Change „Connection Protocol“ from „MOBOTIX“ to „MOBOTIX with PelcoD“

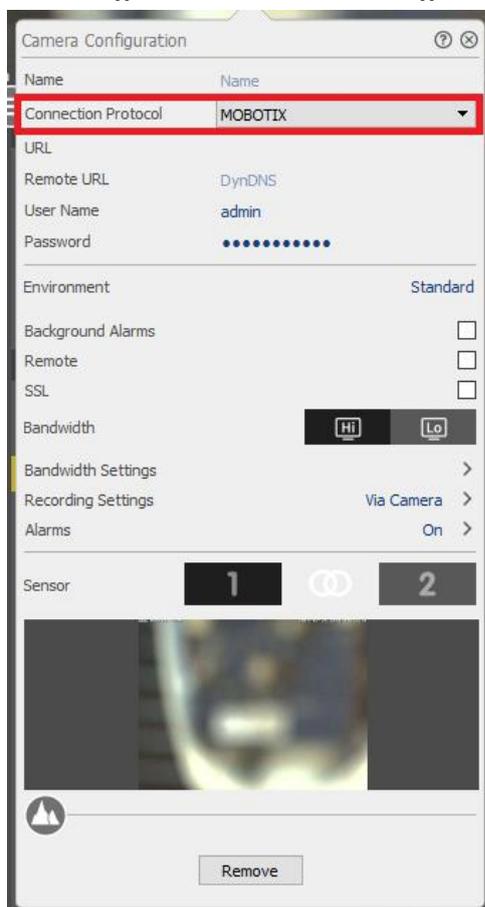


### 3. Restart MxManagementCenter

### 4. Click and hold the left mouse-button for at least 3 seconds on the „Plus-Symbol“

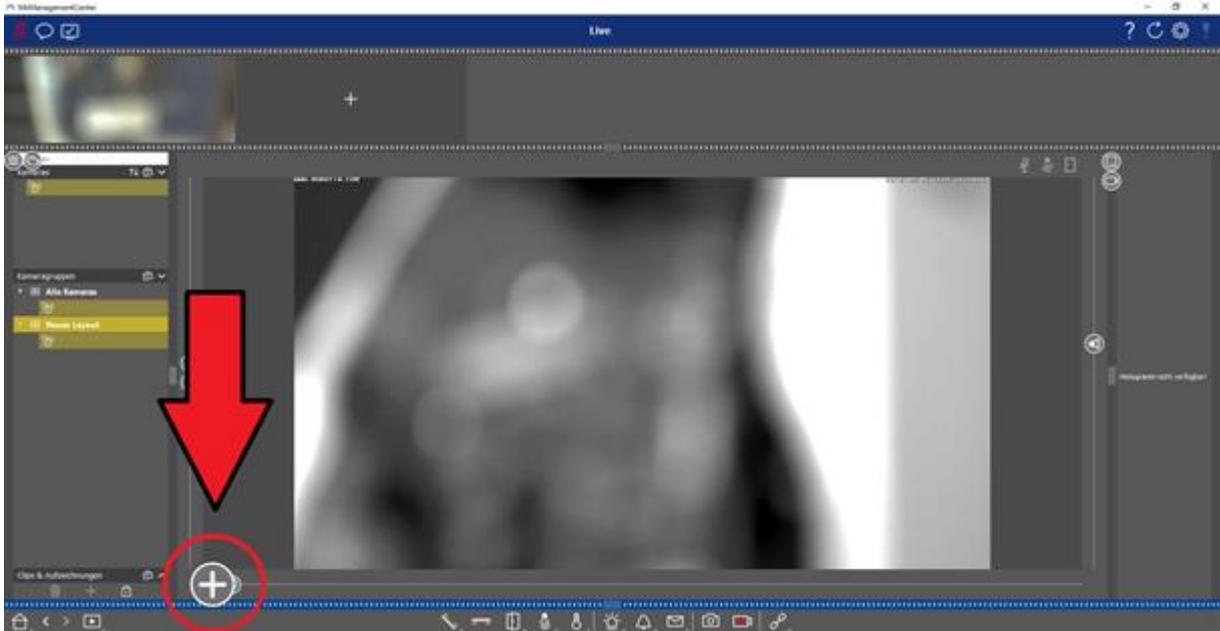

### 5. A crosshair will appear in the upper left corner.

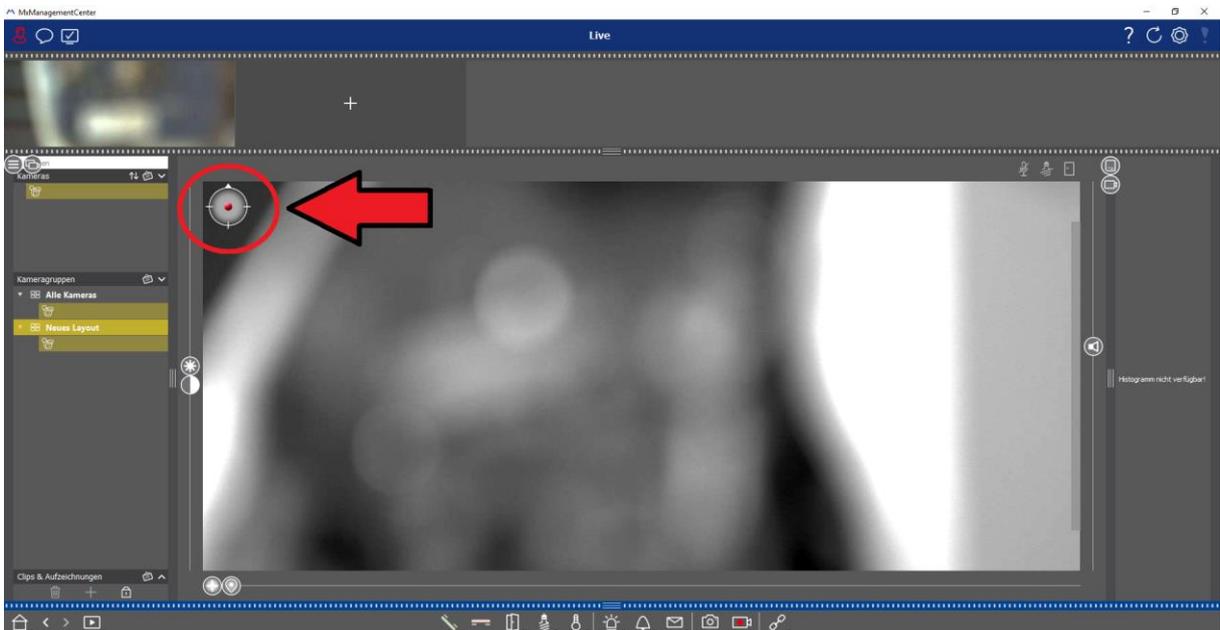

### 6. You are now able to control the PT-Unit with your mouse, while holding the left mouse-button inside the picture and moving it to any direction. By clicking on the „Position-Symbol“ next to the „Plus-Symbol“ you can also call Preset-Positions.